

Economy Retractable - 24"

Product Specifications

Viewable Graphic: 23.75"w x 78"h

Footprint Dimensions: 24"w x 84"h x 15"d

Graphic Template Available

Display Set-Up

Step 1

Remove the display from the carrying case and place at your desired location



Step 2

Flip the Base (1) upside down and rotate the feet to sit perpendicular to the Base.




Step 3

Insert the Shock Cord Pole (2) into the hole in the center of the base. Ensure the pole is seated completely into the bottom half circle cutout.



Step 4

Stand facing the back of the Base (1) and gently pull the Banner Rail (2) upwards. Clip the Hook into the opening located on the Pole.

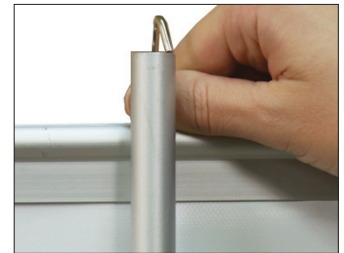

Once set, your display is complete and ready for use.

Storage

Place all product parts into Carry Case and store in a cool dry location.

