


Perforated Window Sign

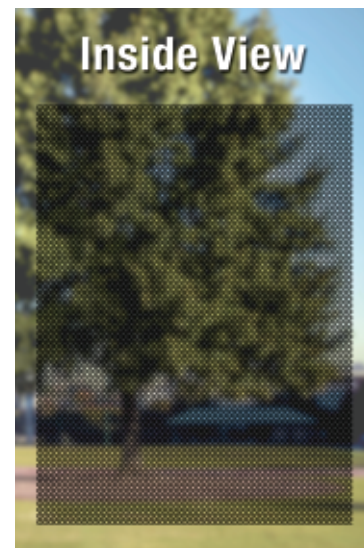

Display Set-Up (requires 1-2 people)

Step 1

Before beginning installation, clean the window surface of any dust and debris using an alcohol-based window cleaner. This will help prevent the adhesive strips on your sign from losing their stickiness. Don't use ammonia-based cleaners; these can break down the adhesive on the tape.



Step 2

Find the adhesive strips located on each edge of the sign. Carefully remove the wax paper from these strips to expose the adhesive.



Step 3

Square up the top edge of the sign with its desired position on the inside of the window. Run your hand along the top edge, applying pressure to affix the top adhesive strip to the window. Starting at the top center of the sign, brush your hand toward the edges to flatten the sign against the window. Run your hands across each edge to affix adhesive to the window. Reposition as needed until you are happy with the placement.



Storage

Remove from window and cover adhesive with wax paper. Roll up with printed side in and store in original box.